



## **DESIGN**


## (IN) VISIBLE PROFILE

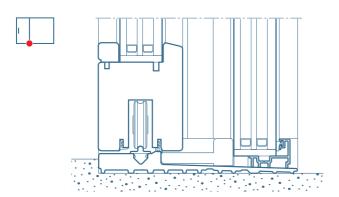


Leaving space to the glass: a room without bounds The lower transom of the fixed sash has been eliminated. The glass and the external environment become the center of the room.

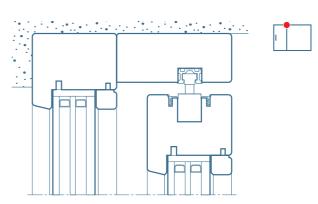

Wood and image only: the hardware disappears on the frame The sliding top guide has been inserted into the frame to hide very functional element.

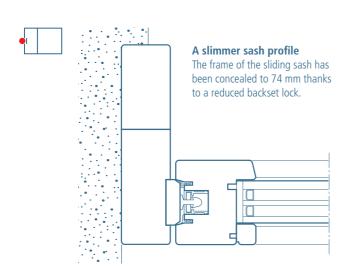

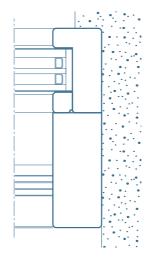

the essential without bounds The glass is built into the jamb of the frame. Thanks to an easy and adequate installation, it blends with the wall.

Side point system:

